
Error code = E1

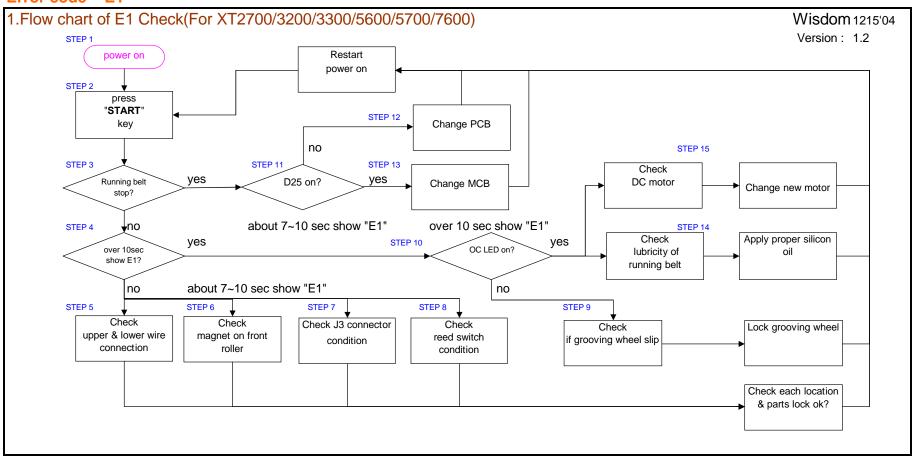

*Explanation

STEP 1: Power on--Power switch on , lights on & upper board reacts.




STEP 3 : When starting treadmill, motor & running belt react.

RETURN



STEP2: Push "START" to start treadmill.

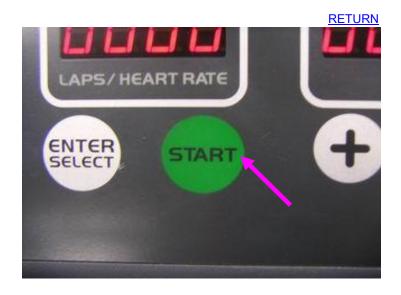

STEP 4: After 7~10 sec shows "E1".

(Different location shows in different model.)




RETURN






STEP 5: Checking upper & lower wire connection condition.

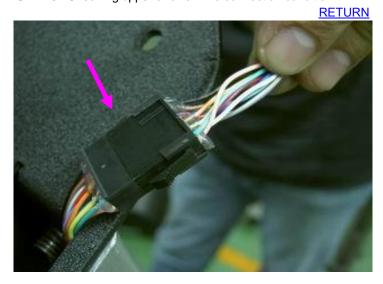

STEP 7 : Check J3 connector condition.




STEP 6: Check condition of magnet on front roller.

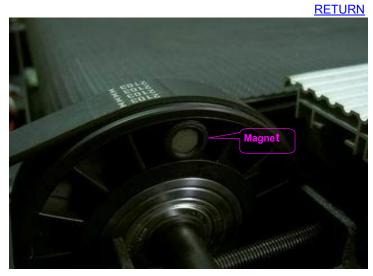

STEP 8 : Check reed switch condition

(Use multimeter OHM to check reed swtich condition)

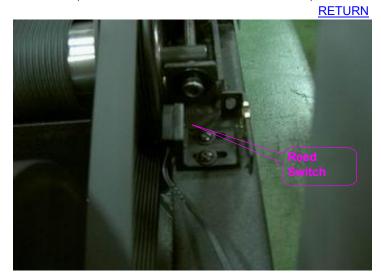

Treadmill Trouble Shooting Guide(Error code check eliminate)




STEP 9 : Check if grooving belt slip

(When man on treadmill, running belt tuns slowly & get slippy)



STEP 11 :Check D25 is on or not.

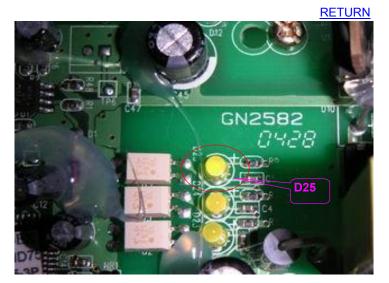

STEP 10: Check OC LED(Overload LED) is on or not.



STEP 12 :Check upper board "start enable signal" is on or not (If D25 isn't on, change a new PCB)

STEP 13 :Check REL1 on MCB is on , then check relative driving parts condition.

(If D25 light is on, but can't drive motor working. Suggest changing a new MCB and broken MCB return Steelflex for further checking.)

STEP 14 : OC LED on - check lubricity , apply Steelflex silicon oil properly between running belt & deck .

STEP 15 : After step 14 still can't solve overload problem, suggest to change a new DC motor.



RETURN